MANUAL

KEO SPACER

EN

SPACER LOOK KEO

1. TEST YOUR OUTSOLE

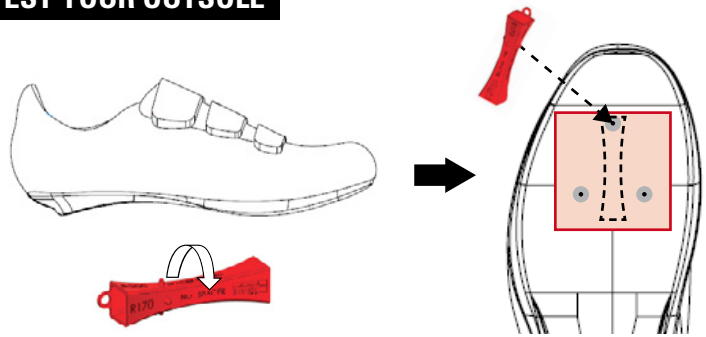

		R OUTSOLE	SPACER
OUTSOLE	CURVED	155	NO SPACER
		170	NO SPACER
		185	SPACER NEEDED
	FLAT	200	SPACER NEEDED

PRECAUTIONS

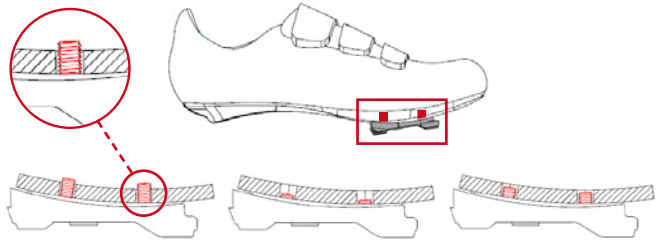

NO NO OK

13 mm — Screw length delivred with LOOK KÉO SPACER

10 mm — Normal screw length delivred with LOOK KÉO CLEAT

1 / Screw length impact

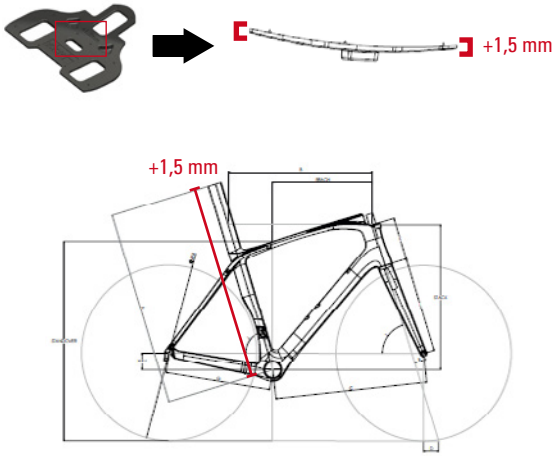

2 / Seat height impact to keep your position on the bike

2. INSTALLATION

x2

x6

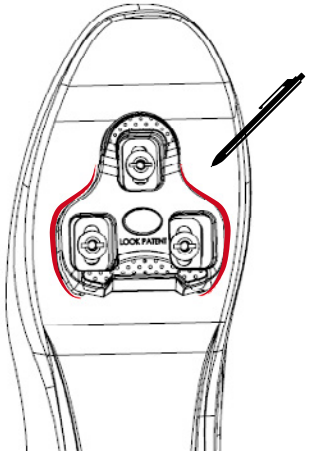

1 / With a pen, save your cleat position

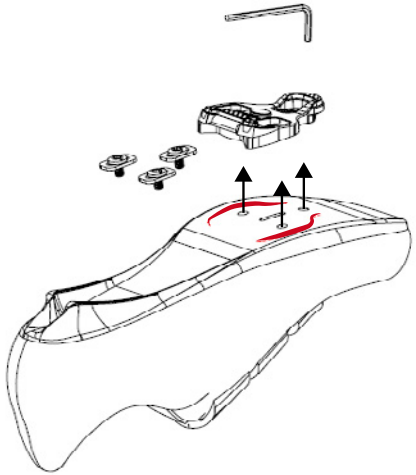

2 / Remove the cleat with an allen key

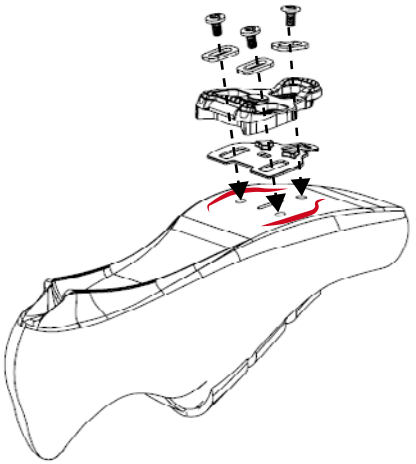

3 / Now, install your LOOK KÉO cleat with spacer

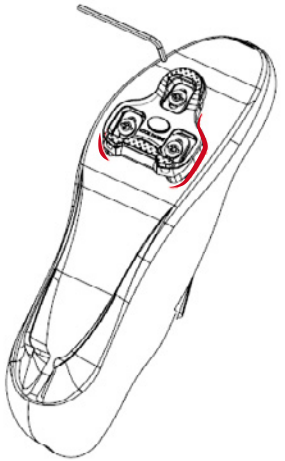

4 / Tighten, adjust and ready to ride